



# H5768F6RN

## Classical Finial Fountain (6pc)

### STAGE 1

Prepare a suitable location for your new fountain.  
The fountain should sit on a firm and level pad. Set 7770 base in place.

### STAGE 2

Thread standpipe into 6770 bowl. Place bowl on base, centre and check to make sure it is level (use of a 4' level is recommended).

### STAGE 3

Place the pump in bowl and push power cord down stand pipe. Reach under base and pull cord out for later connection. Open slit in rubber stopper and place around power cord just above the stand pipe. Then push the stopper firmly into the stand pipe to create a tight water seal.

### STAGE 4

Thread the smaller 1/2" barb adapter into the pump. Attach long tube to the adapters barb. Place a flow restrictor on the tube about 6" from the pump, tightening just enough to keep it in place on the tube.

### STAGE 5

Place the 7768 Riser Pedestal around the pump and standpipe in the bowl. Check to make sure it is centred.

### STAGE 6

Insert the two larger barbed adapters in the top and bottom of the 6767 bowl. Place the bowl on the 7768 pedestal but before you set it down, connect the loose end of the long tube to the barb underneath the 6767 bowl. Then set it down and check to make sure it is centred and level.

### STAGE 7


Connect a short tube to the pipe inside the bottom of the 6768 small bowl/riser unit. Lift this unit into place, connect the bottom of the tube to the barb in the 6767 bowl, and set it down. Check to make sure it is centred and level.

### STAGE 8

Connect the other short tube to the pipe at the top of the small bowl/riser unit. Lift the 5768 finial and slip it down over this tube into place on the small bowl/riser unit. The tube should run almost to the top of the finial. (Adjusting the position of this tube in the finial will affect the water flow. The water will flow more aggressively if the tube is at the surface and more gently when the tube terminates down inside the finial).

### STAGE 9

Read your pump instructions, fill fountain with water, switch on and enjoy.

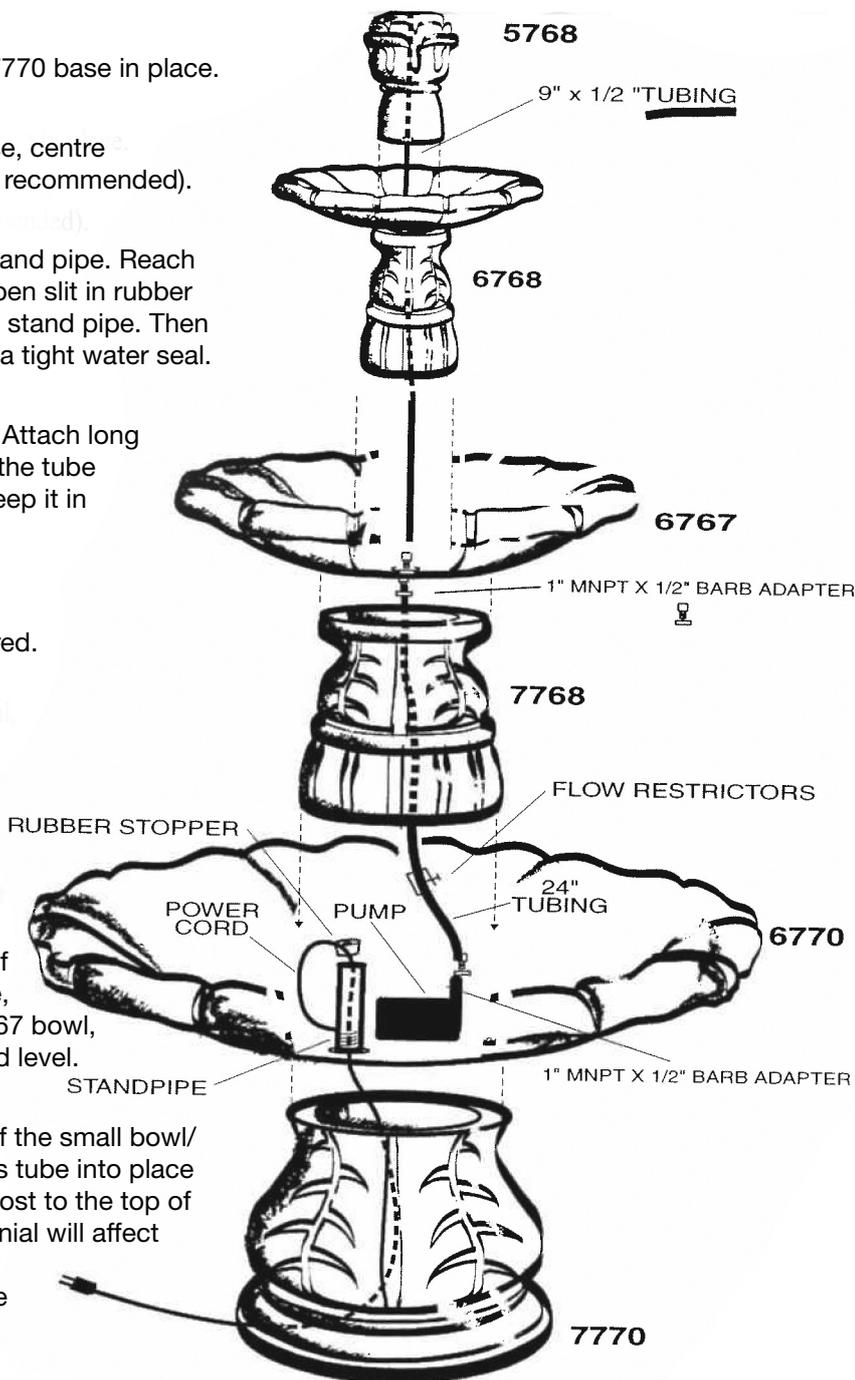

### IMPORTANT - WINTER CARE

Winter Ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- Disconnect power to pumps.
- Remove adapter from bottom bowl to open drains and let all moisture out. Keep drains open throughout winter.
- Place an absorbant material like burlap, blankets etc inside vases/bowls and cover all with a fountain cover.
- Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.

## ADVISORY NOTICE HEAVY ITEMS!

Please take care when  
handling these items